

---

## TAKO | TAKO SLIM

PL INSTRUKCJA MONTAŻU I EKSPLOATACJI

CZ NÁVOD NA MONTÁŽ A ÚDRŽBU

SK NÁVOD NA MONTÁŽ A ÚDRŽBU

EST PAIGALDUS- JA KASUTUSJUHEND

LT MONTAVIMO IR EKSPLOATAVIMO INSTRUKCIJA

LV MONTĀŽAS UN EKSPLUATĀCIJAS INSTRUKCIJA

DE MONTAGE- UND AUFBAUANLEITUNG

RO INSTRUCȚIUNI DE MONTAJ ȘI OPERARE

HU SZERELÉSI ÉS ÜZEMELTETÉSI ÚTMUTATÓ










UA ІНСТРУКЦІЯ З МОНТАЖУ І ЕКСПЛУАТАЦІЇ

BY ІНСТРУКЦЫЯ ПА МАНТАЖЫ І ЭКСПЛУАТАЦЫІ

RU ИНСТРУКЦИЯ ПО МОНТАЖУ И ЭКСПЛУАТАЦИИ

EN INSTRUCTIONS FOR ASSEMBLY AND USE

FR INSTALLATION ET UTILISATION - MODE

											
		1	2	3	4	5	6	7	8	9	
TAKO	80X80X16 90X90X16	■	3	12	3	3	6	3	0*	0*	0**
	80X80X16 90X90X16	■	3	12	3	3	6	3	0*	0*	0**
	80X80X4 90X90X4	■	0*	0*	0*	0*	0*	0*	0*	0*	0**
	80X80X4 90X90X4	■	0*	0*	0*	0*	0*	0*	0*	0*	0**
	100X80X4 120X90X4	■	0*	0*	0*	0*	0*	0*	0*	0*	0**
TAKO SLIM	80X80X4 90X90X4	■	0*	0*	0*	0*	0*	0*	0*	0*	1
	80X80X4 90X90X4	■	0*	0*	0*	0*	0*	0*	0*	0*	1

PL

\*Możliwość dokupienia nóżek S907-003  
\*\* Syfon brodzikowy Ø90 TAKO S904-006

CZ

\*Možnostnákupunohou S907-003  
\*\*Sprchovávanícasifon Ø90 TAKO S904-006

SK

\*Možnosťkúpných S907-003  
\*\*Sprchovávanícasifon Ø90 TAKO S904-006

EST

\*Võimalusjalguosta S907-003  
\*\*Dušialusesifoon Ø90 TAKO S904-006

LT

\*Galimybėjisgytikojų S907-003  
\*\*Dušopadeklosifonas Ø90 TAKO S904-006

LV

\*Iespējaiegādātieskājas S907-003  
\*\*Dušasteknessifons Ø90 TAKO S904-006

DE

\*MöglichkeitBeinezukaufen S907-003  
\*\*Duschwannensiphon Ø90 TAKO S904-006

RO

\*Posibilitatea de a cumpărăpicioare S907-003  
\*\*Sifon cu tavă de duș Ø90 TAKO S904-006

HU

\*Lehetőséglábakvásárlására S907-003  
\*\*Zuhanytálcasifon Ø90 TAKO S904-006

UA

\*Можливістьпридбанняножок S907-003  
\*\*СифондлядушовоголоткаØ90 TAKO S904-006

BY

\*Магчымысцьнабыцьножкі S907-003  
\*\*Душавыпаддон, сифон Ø90 TAKO S904-006


RU

\*ВозможностькупитьножкиS907-003  
\*\*ДушевойподдонсифонØ90 TAKO S904-006






EN

\*Possibility to buy legs S907-003  
\*\*Showertraysiphon Ø90 TAKO S904-006


FR

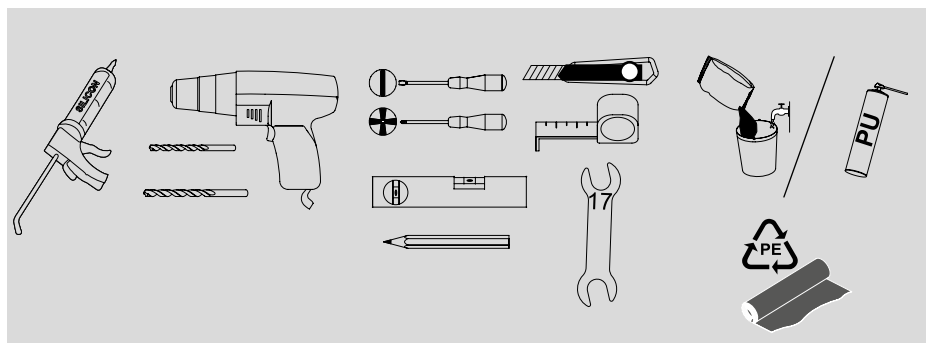\*Possibilitéd'acheter des jambes S907-003  
\*\*Siphon pour receveur de douche Ø90 TAKO S904-006

# 1. | TAKO

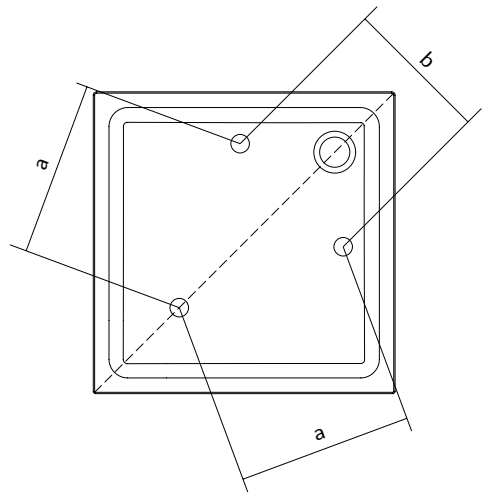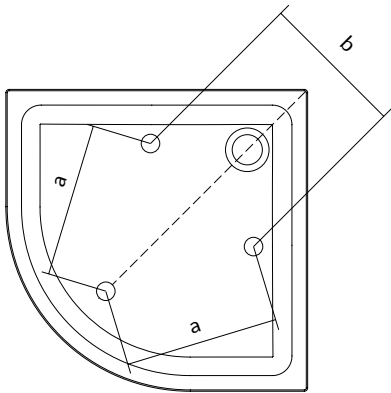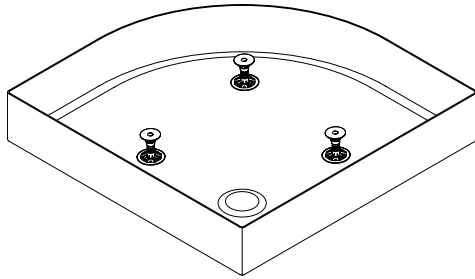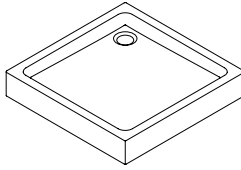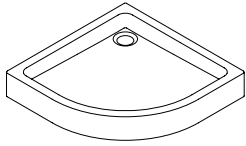


	mm	
	a	b
80 x 80 x 16	350	260
90 x 90 x 16	450	375
80 x 80 x 16	420	300
90 x 90 x 16	495	300

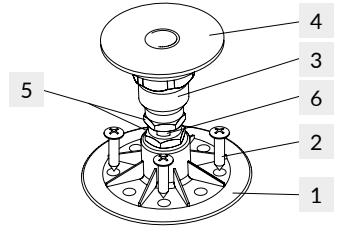


## 2. | TAKO





1

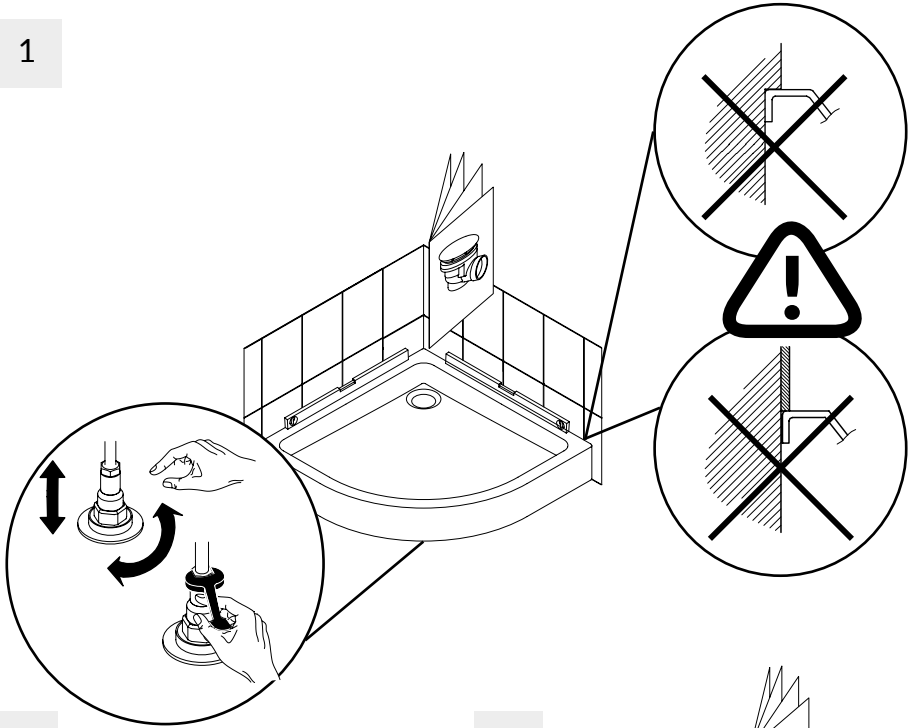

2

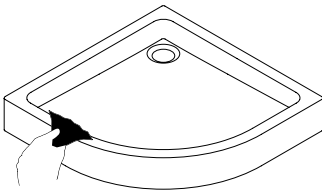



3

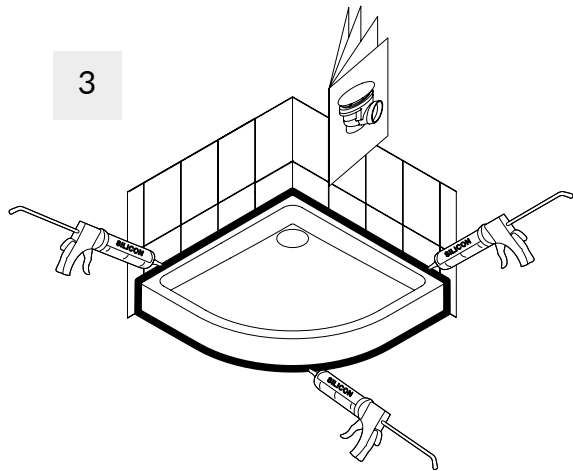


# 1. | TAKO | TAKO SLIM




1

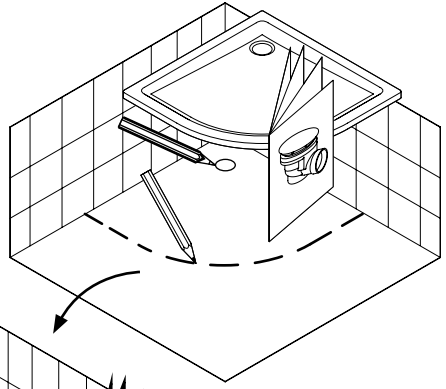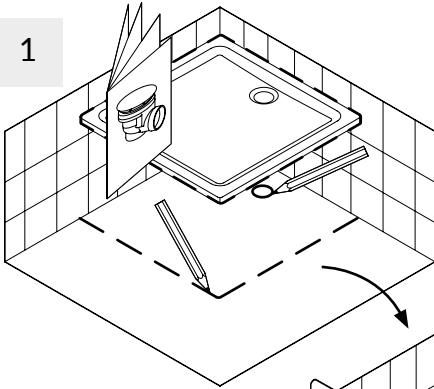

2

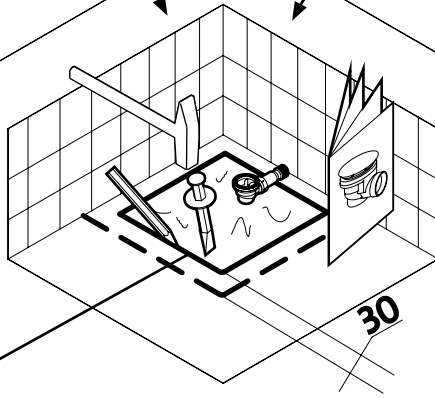


30

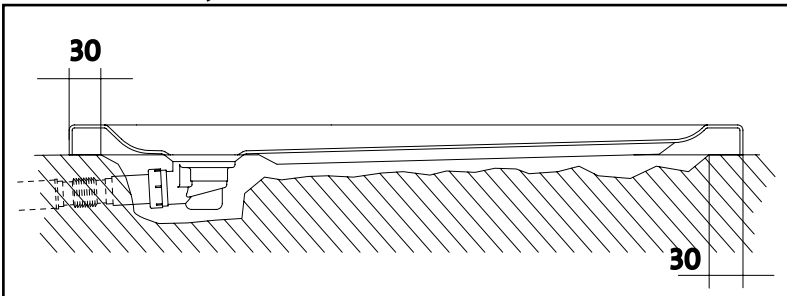


30

3

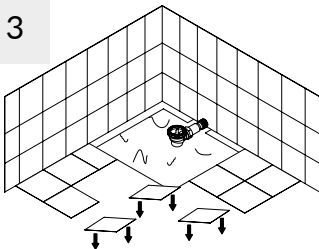


4

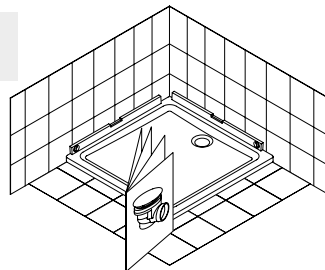


## 2. | TAKO | TAKO SLIM




1

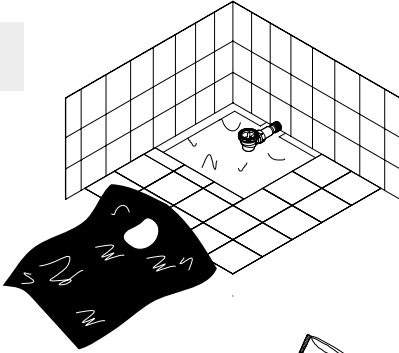


2

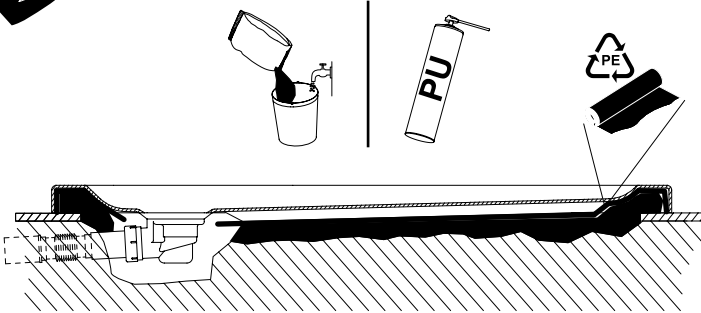


3

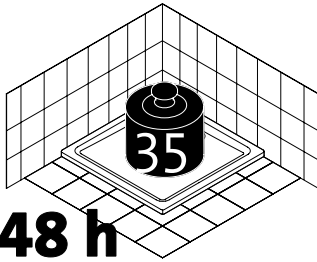

4

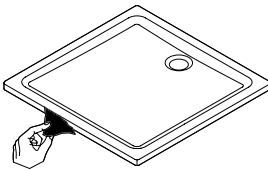


5

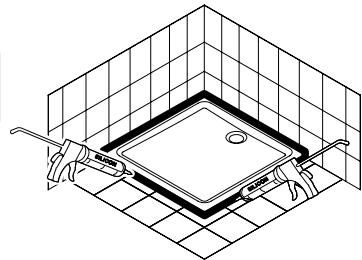





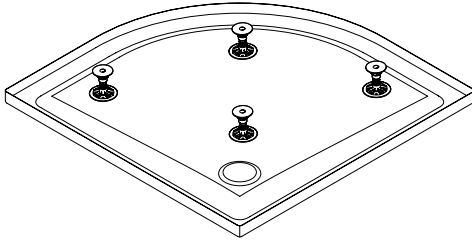





24h



### 3. | TAKO | TAKO SLIM + S907-003








		mm		
		a	b	c
80 x 80		300	340	
90 x 90		445	445	
80 x 80		675	450	500
90 x 90		715	470	550
100 x 80 x 4		790	520	570
120 x 90 x 4		970	560	780

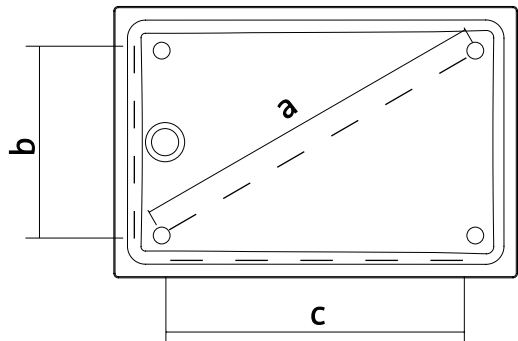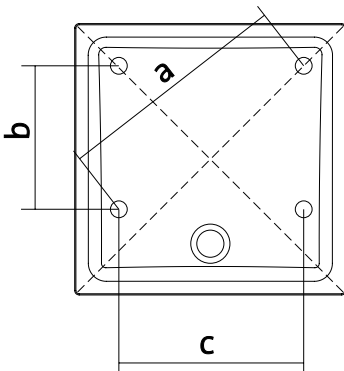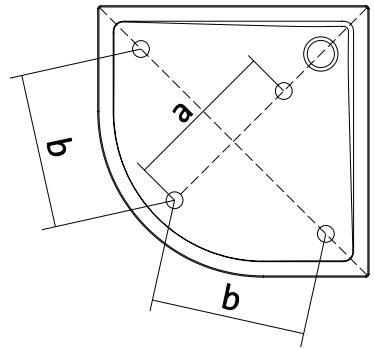
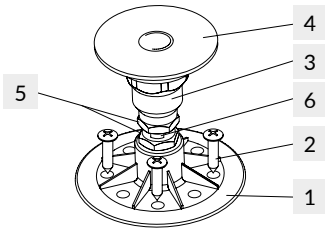


# 5. | TAKO | TAKO SLIM

1

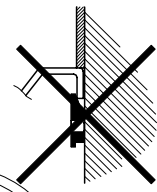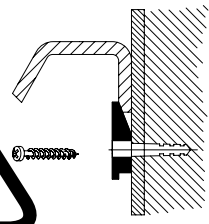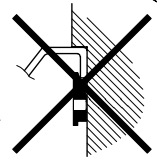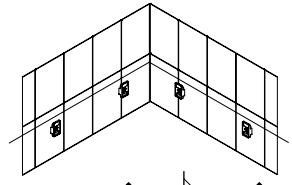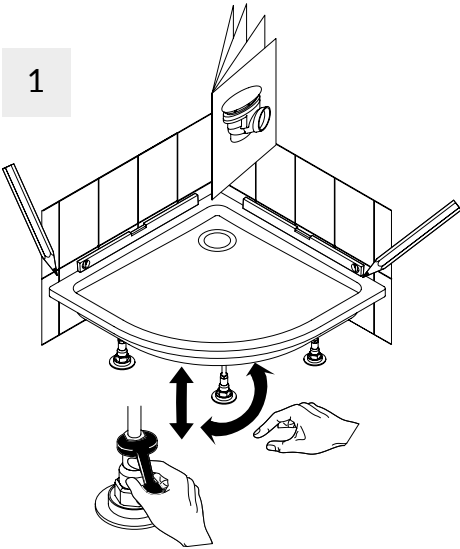

2

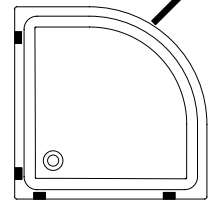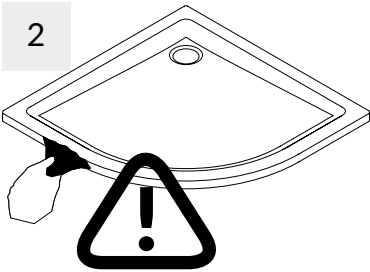

3

