






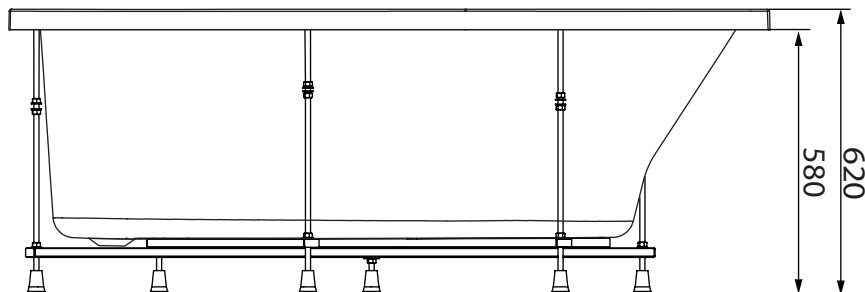






polysan

TIGRA 170 R

GB Mounting instructions
 CZ Montážní návod
 H Szerelési utasítás
 RU Инструкция по монтажу
 D/A Montageanleitung
 PL Instrukcja montażu

RO Instrucțiuni de montaj
 ES Manual de instrucciones
 FR Notice de montage
 NL Montage instructie
 LT Montavimo instrukcija
 SK Montážny návod



- 01 2x M12 
- 02 23x M12 
- 03 3x M12 
- 04 10x 6x20 
- 05 10x M10/19 
- 06 18x M12/23 
- 07 1x M12/36 
- 08 6x 
- 09 6x 
- 10 5x 
- 11 6x 


12 5x 580 

13 1x 100 

14 1x 

15 1x 


16 1x 

17 8x 8x40 

18 2x M10/23 


19 2x M10 


20 4x 

21 2x 



22 2x M10 

23 8x 4x40 

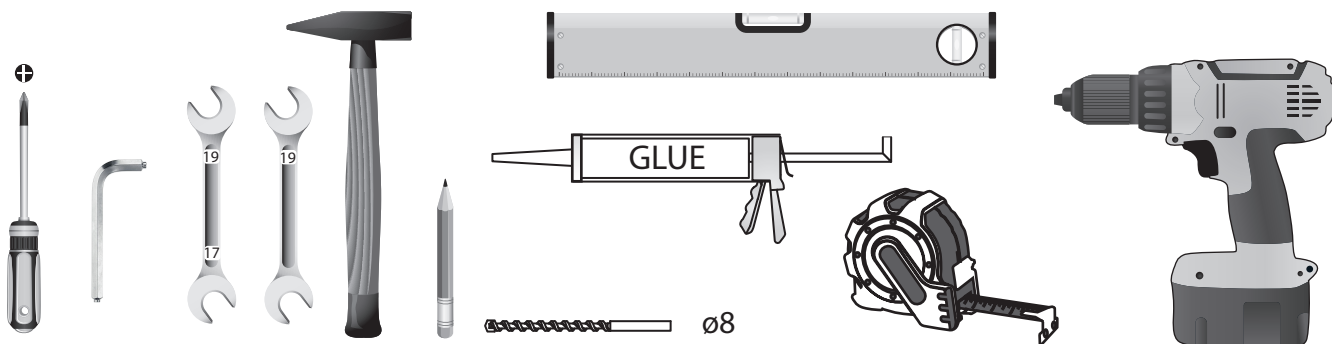


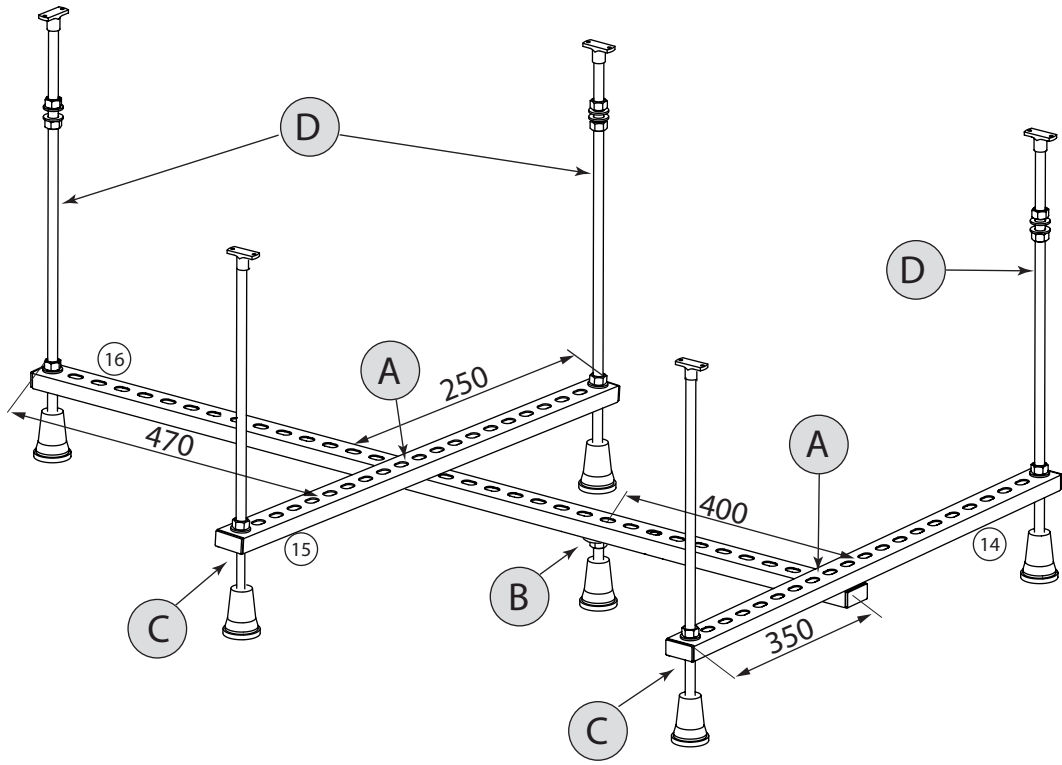


Assemble upside down on a soft mat.

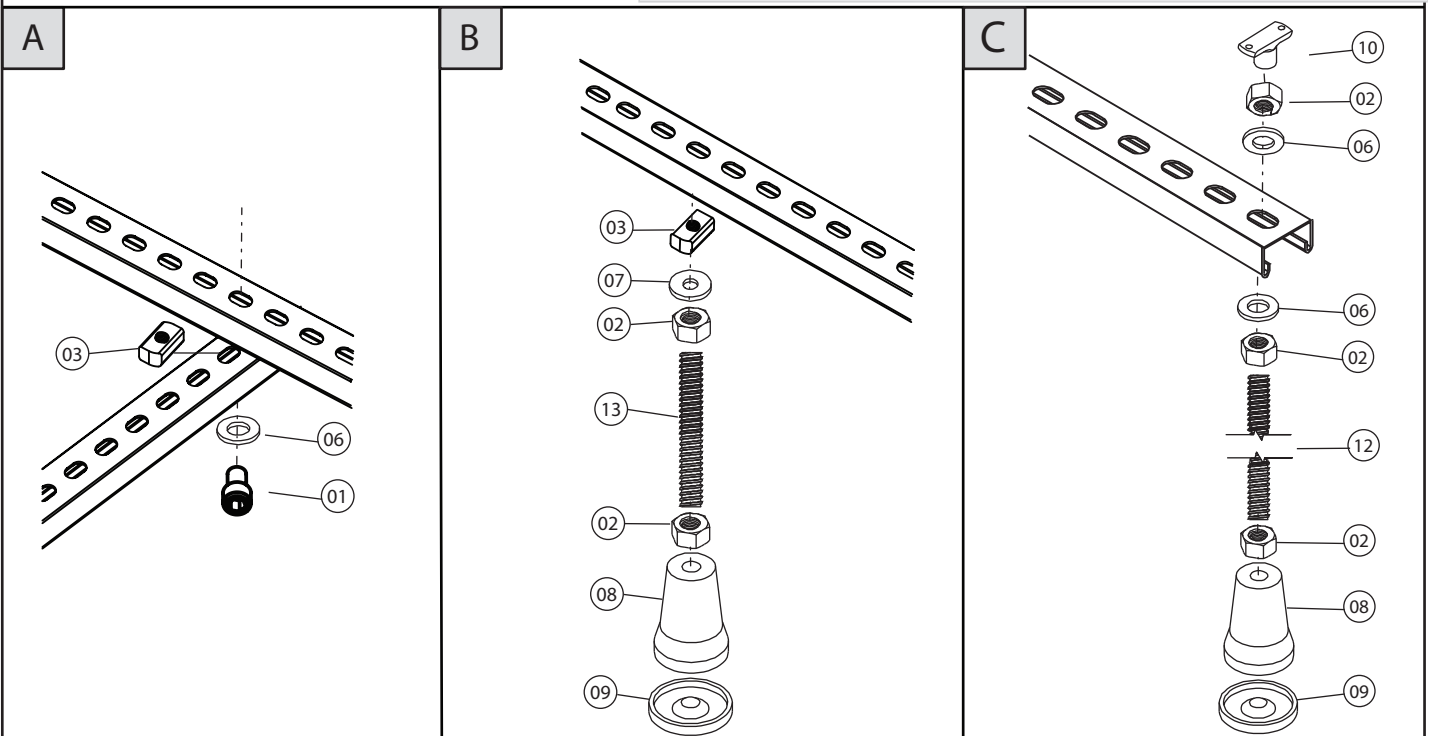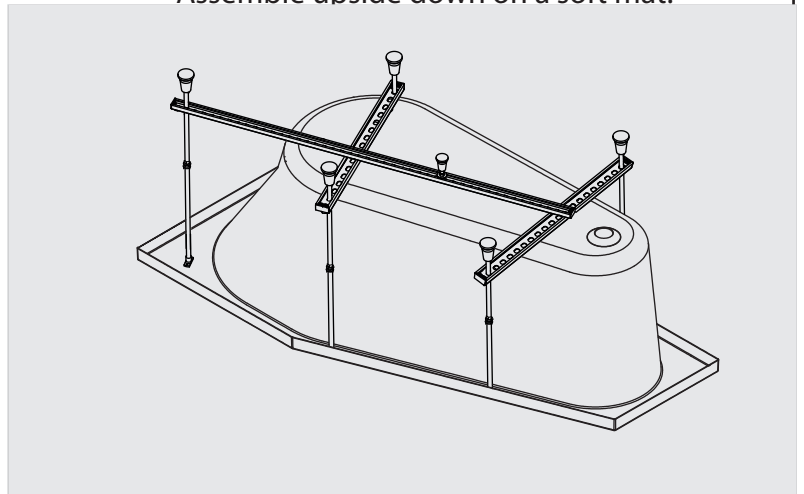



D

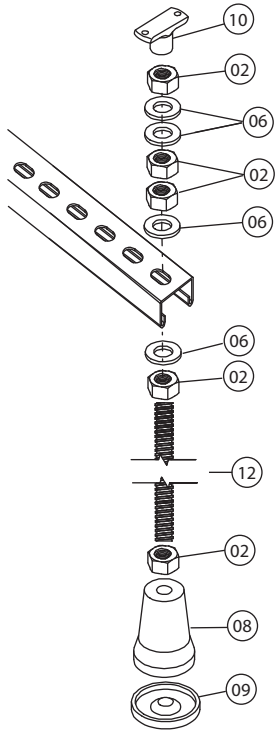

Glue

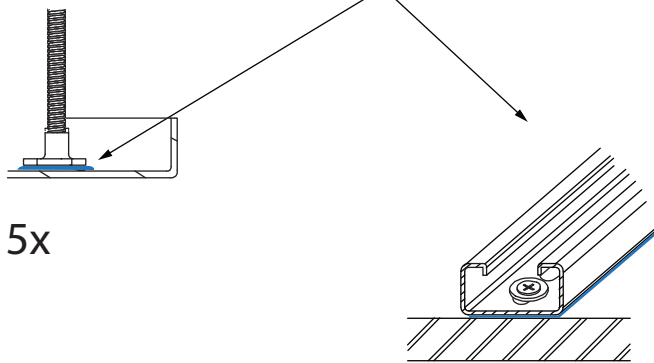

E

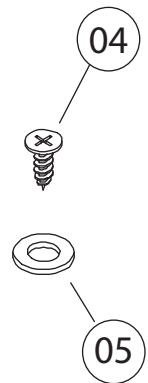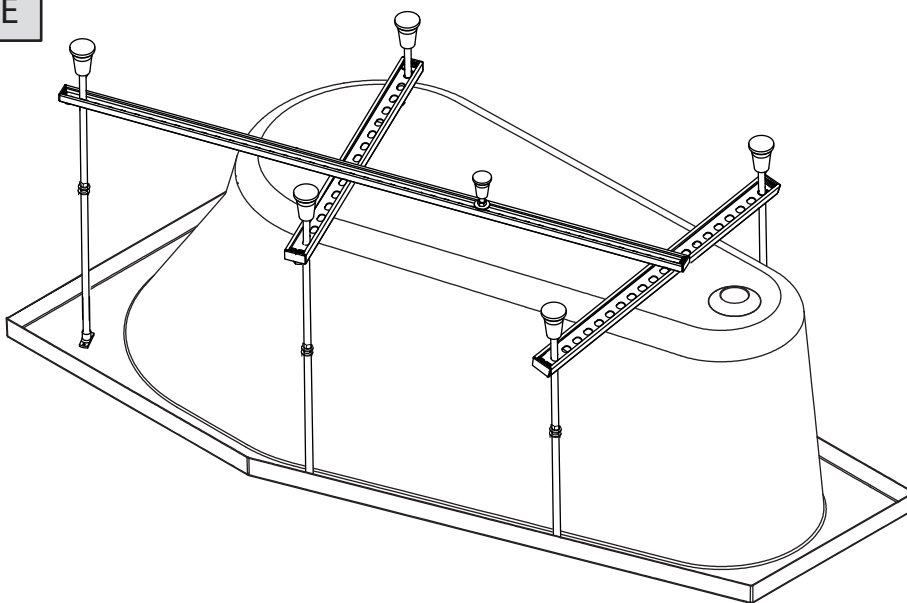

F

