


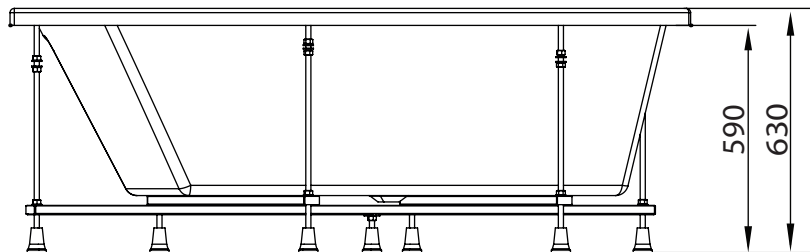










polysan




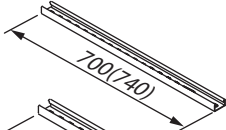
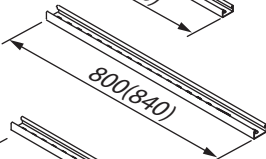
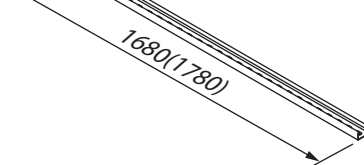
EVIA R








GB Mounting instructions
 CZ Montážní návod
 H Szerelési utasítás
 RU Инструкция по монтажу
 D/A Montageanleitung
 PL Instrukcja montażu


RO Instrucțiuni de montaj
 ES Manual de instrucciones
 FR Notice de montage
 NL Montage instructie
 LT Montavimo instrukcija
 SK Montážny návod




- 01 2x M12 
- 02 28x M12 
- 03 3x M12 
- 04 8x 6x20 
- 05 8x M10/19 
- 06 22x M12/23 
- 07 1x M12/36 
- 08 7x 
- 09 7x 
- 10 7x 
- 11 6x 





- 12 5x 600 
- 13 1x 470 
- 14 1x 120 
- 15 1x 
- 16 1x 
- 17 1x 

- 18 8x 8x40 
- 19 2x M10/23 
- 20 2x M10 
- 21 4x 
- 22 2x 
- 23 2x M10 
- 24 8x 4x40 


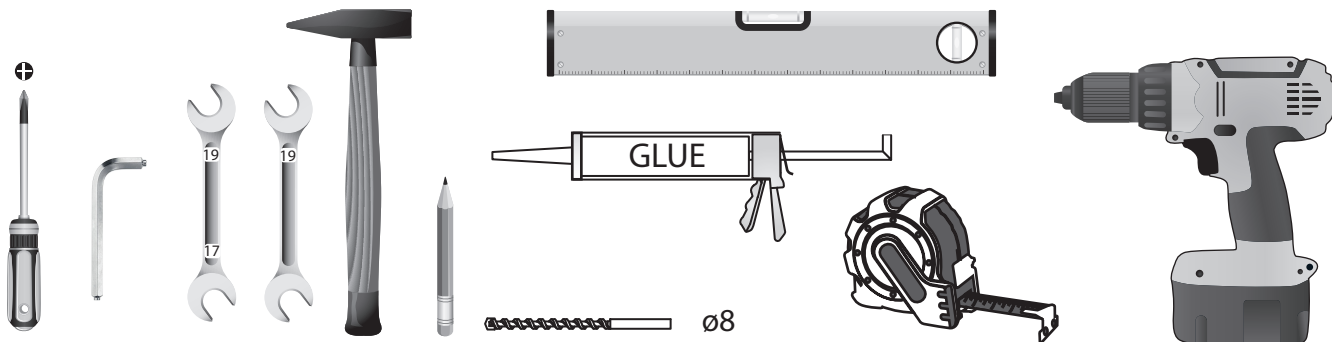


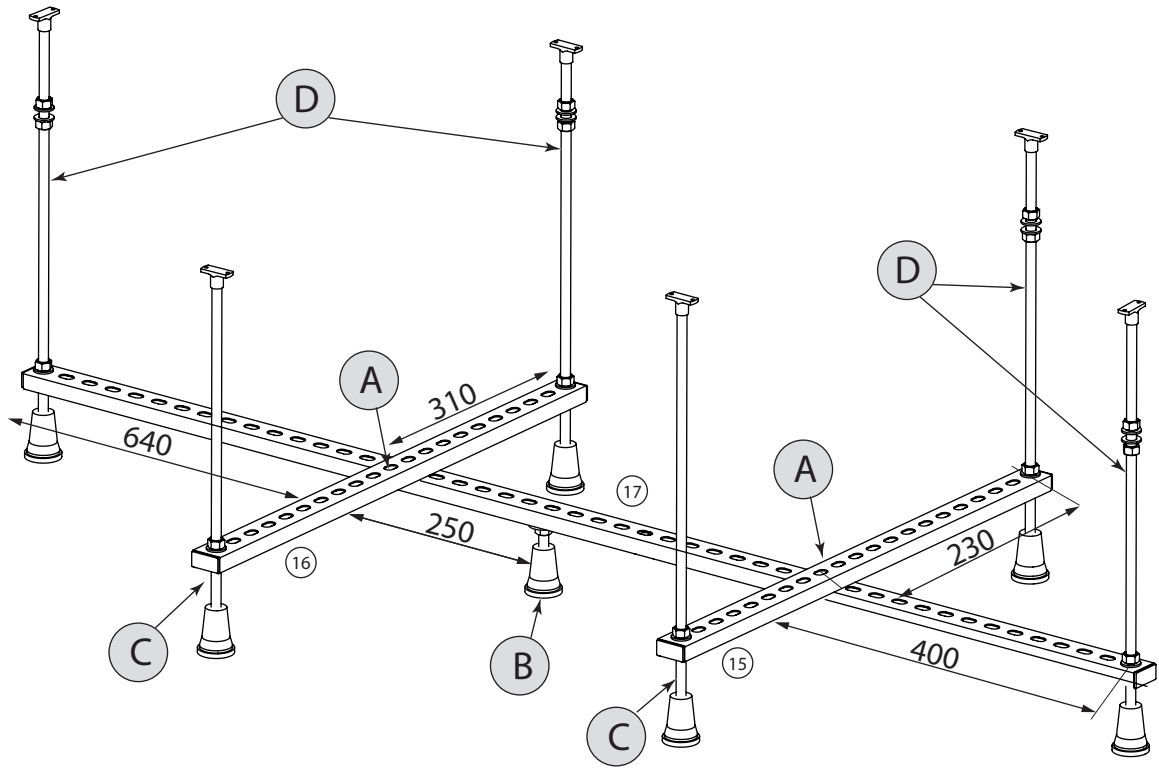



Assemble upside down on a soft mat.

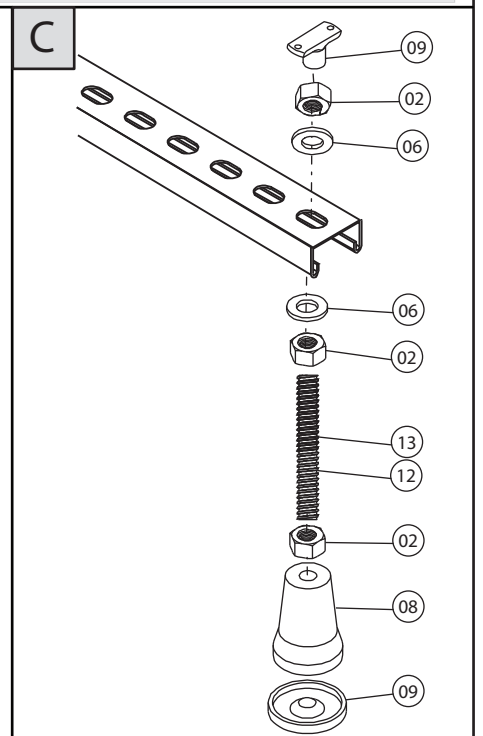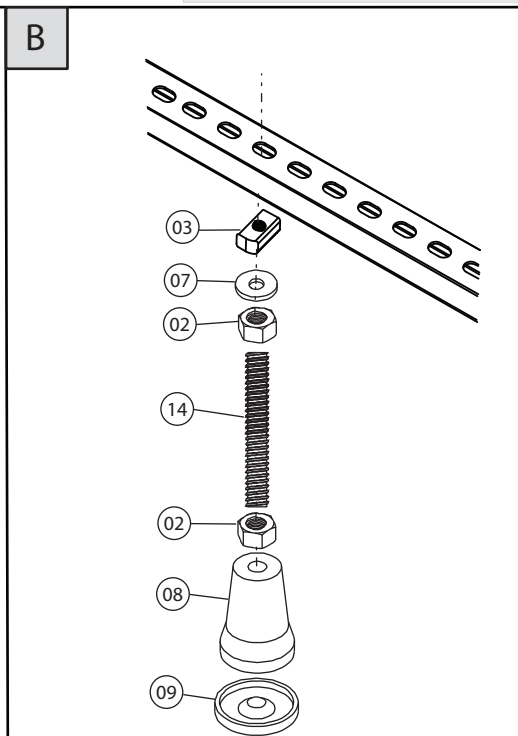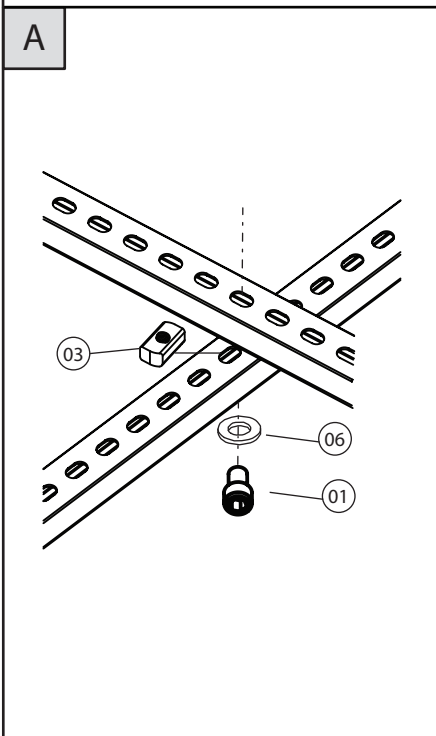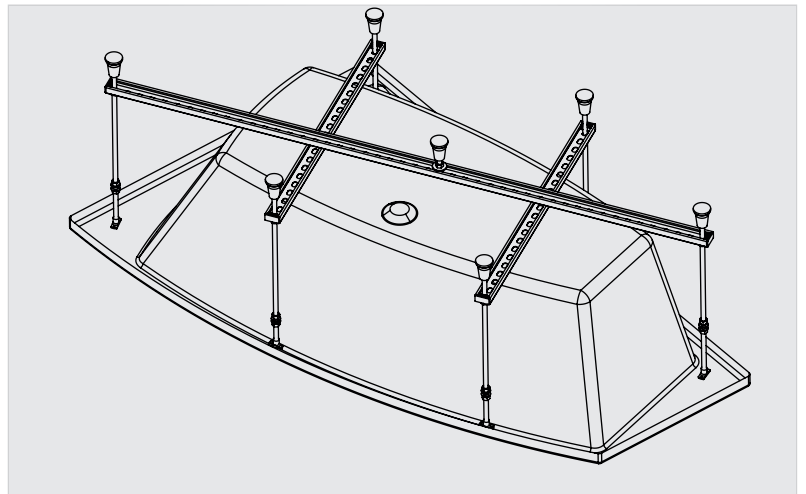

D

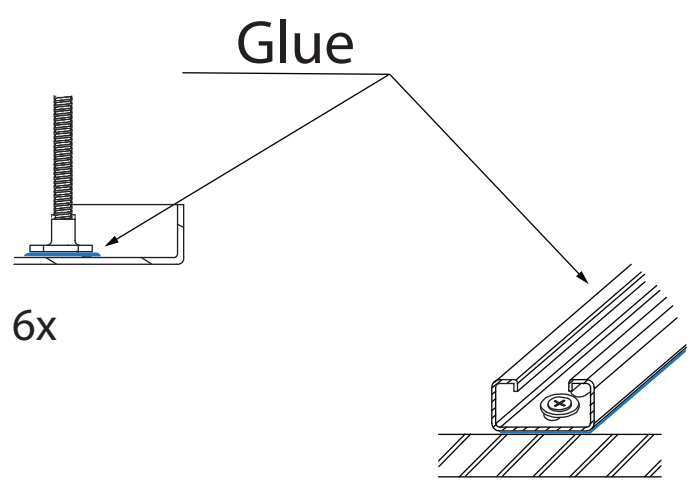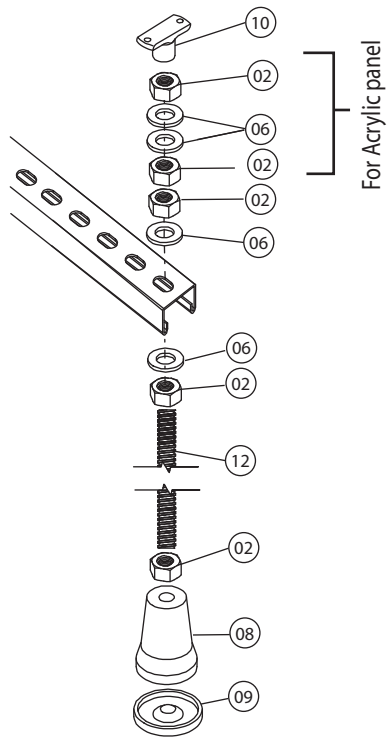

E

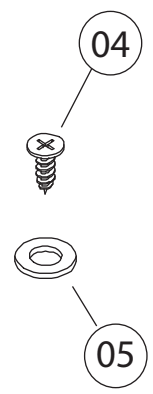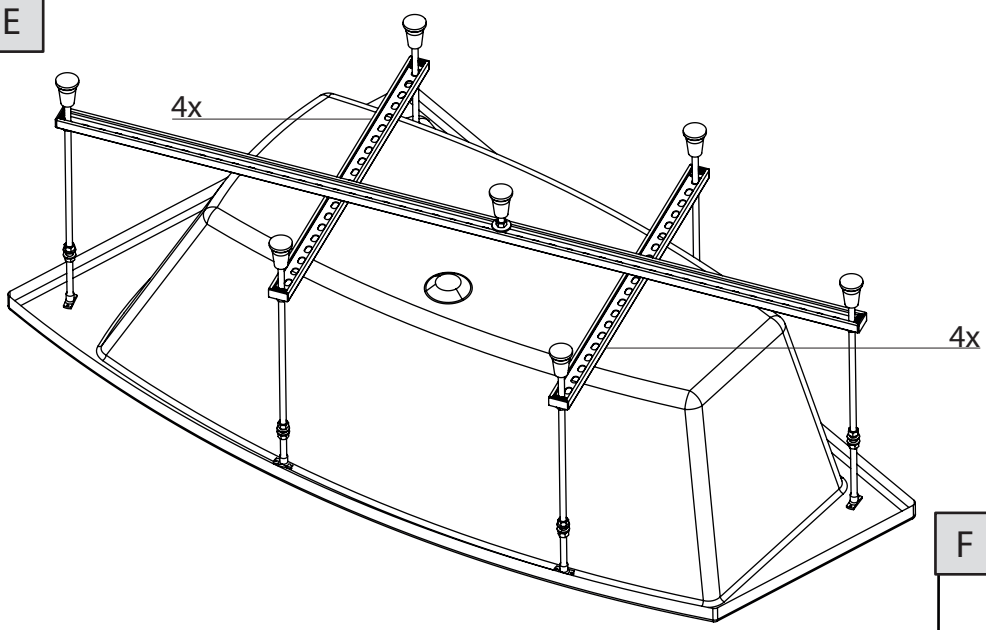

F

